



Generally, load weight placed on the upper deck(s) should not outweigh the load placed on the bottom deck. Care should also be taken to ensure sufficient load over the drive axles to preserve traction. Furthermore, insufficient weight over the trailer axles will affect stability.

Ratchet Deck Loading Bias Guide

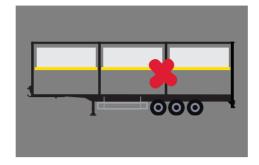


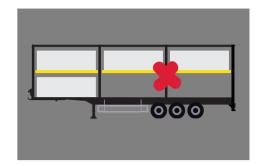


Key



▲ This combination is safe, provided loads are uniformly distributed.

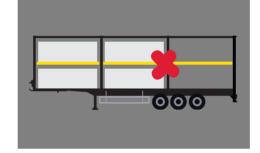

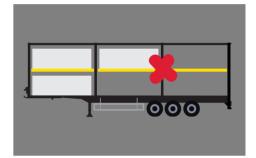



▲ This combination is unsafe

